


CANISTER INSTRUCTIONS

SET UP & DISPOSAL


E245 Spraybond

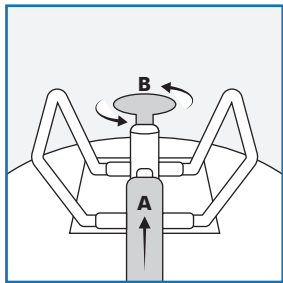

STEP 1


Screw hose to canister valve (A).

Open valve (B) and a rush of pressure will go through the hose.

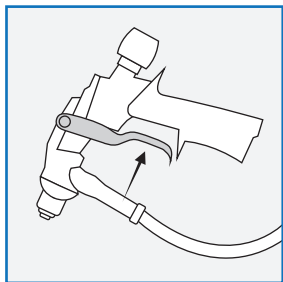


STEP 2

Release Trigger on the gun to purge adhesive through.

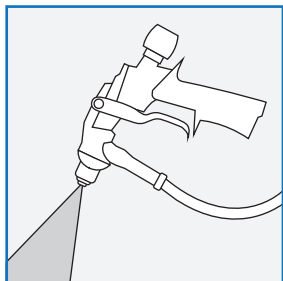


STEP 3

Hold gun 10-15 cm from surface and spray in even coats.

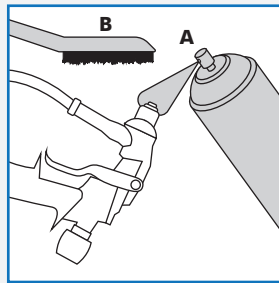


STEP 4

Gun tip will build up dried adhesive which will need to be cleaned off periodically. Use Cleaner 17, spray solvent on to the tip of the gun (A). Scrub tip with a wire brush (B) or similar to remove adhesive residue.

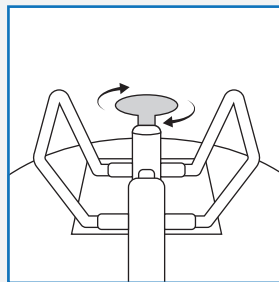


STEP 5

Once the canister is empty, ensure a new canister of adhesive is available. Close the valve of the empty canister.

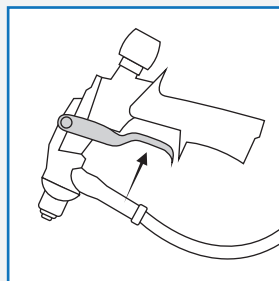


STEP 6

Pull trigger on gun to release pressure and adhesive residue.

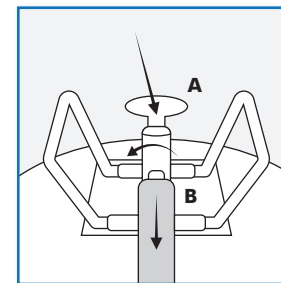


STEP 7

Once pressure is released from the hose, unscrew the hose from the empty canister and screw it to the new canister immediately in order to prevent curing of the residue in the hose.

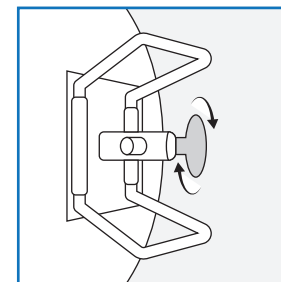

STEP 8

When the hose is detached from the canister, turn canister on its side and in a well-ventilated area, preferably outside, and open valve to release pressure in the canister completely.

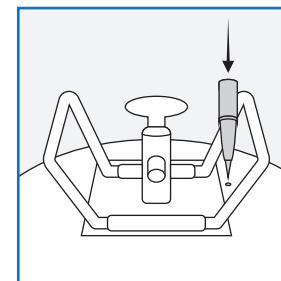

STEP 9

Using a hammer and punch, punch a hole in the small disc next to the canister carry handles.

The canister can be recycled as waste metal. Subject to local regulations and rules.